instockkitchens.com

Blind Base Cabinets

Installation Instructions

Cabinet is designed to have a maximum of 3” of blind overlay panerl showing at minimum pull distance.

Place minimum 3” filler (BF3) between the blind cabinet and the adjacent cabinet to allow proper clearance for full door opening.

Kitchen Layout

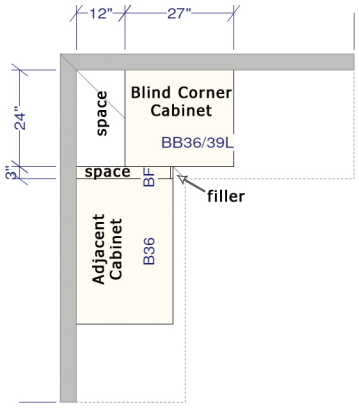

Bird Eye View

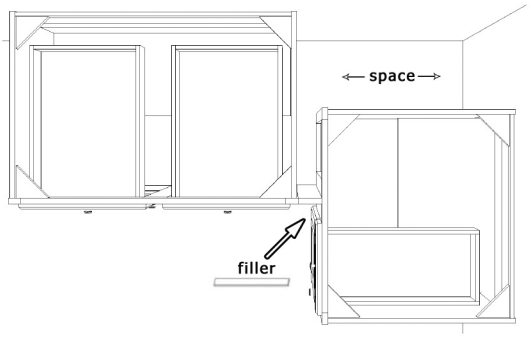
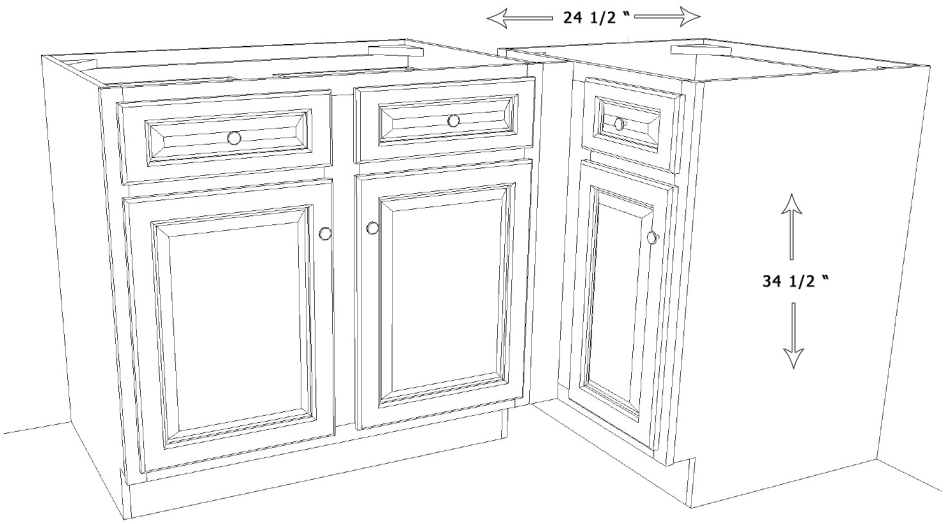
Final Layout of Cabinets